

HOW TO READ YOUR WATER METER



The Water Utility will read your water meter for billing purposes, but **should you wish to monitor your own consumption**, here's how:


- ◆ Open the lid on the register and shine a flashlight on the solar panel to activate the LCD display. This may take a few seconds to activate. *
- ◆ Take a reading at a set time of the day.
- ◆ Take a 2nd reading at the same time the next day.
- ◆ The difference between the two readings is your daily water consumption.

*Note: when the register display is first activated with a flashlight, all icons will be briefly displayed followed by firmware information. The display will then show the lifetime consumption reading followed 30 seconds later by the current flow rate. The flow rate is in Litres Per Minute. When the display indicates "RATE" the flow rate is being displayed.

Leak Indicator

Displays a possible Leak

- ◆ **OFF** – indicates no leaks
- ◆ **Flashing** – water usage for more than 50% of time in 24-hour period
- ◆ **Continuous ON** – continuous water usage for 24 hours. There is most likely a leak in your home

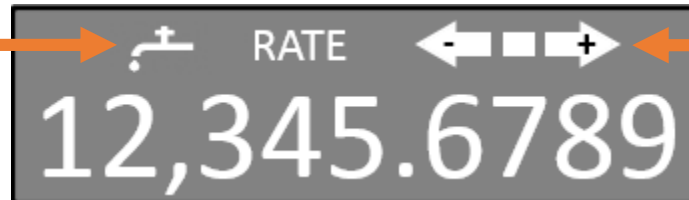

The LCD figure displays your water meter reading in Cubic Metres (m³). The last 4 digits are decimal points.
(eg. 12,345.6789 Cubic Metres)

Flow Indicator

Displays direction of water flow

- ◆ **ON** – water in use
- ◆ **OFF** – water not in use
- ◆ **Flashing** – water is running slowly
- ◆ **(-)** – indicates reverse flow
- ◆ **(+)** – indicates forward flow